



Firmware Upgrade

—NovaLCT



Xi'an NovaStar Tech Co.Ltd

Description

Function	Upgrade the hardware program of the control system
Application	1. To support new function;
	2. Fix Bug;

1. Software operation

1. Run NovaLCT

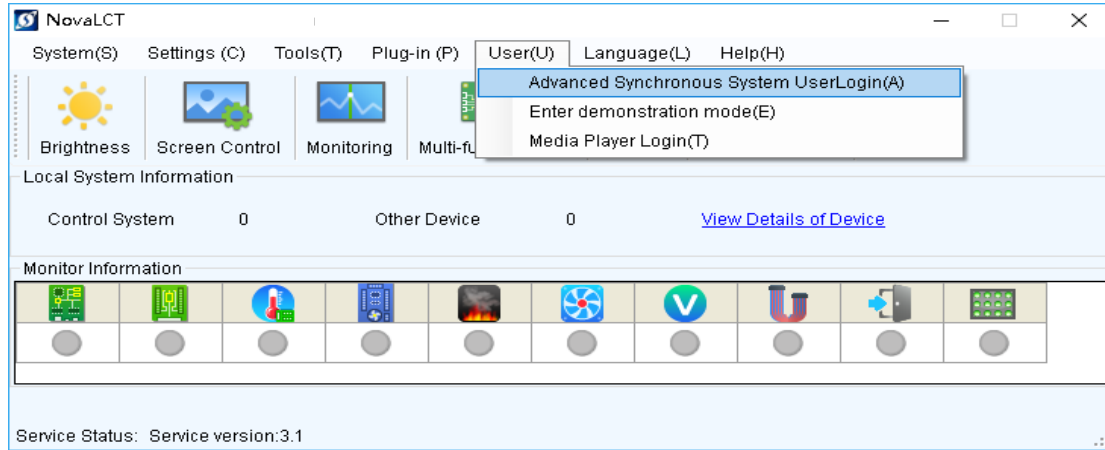


Figure 1

2. Login as Advanced user, and the password is "admin"

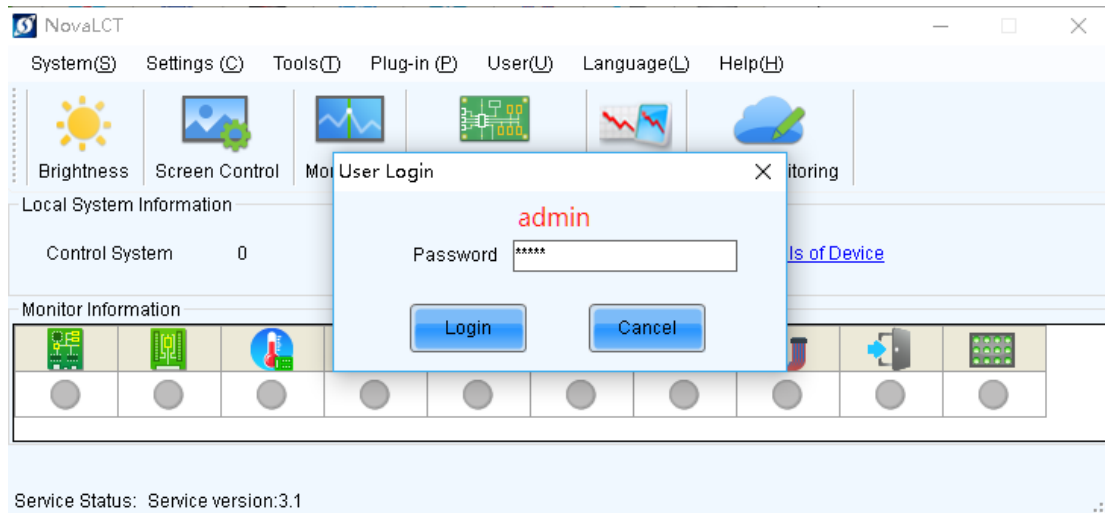


Figure 2

3. Type "admin" on the NovaLCT main interface, and a pop-up window will show.

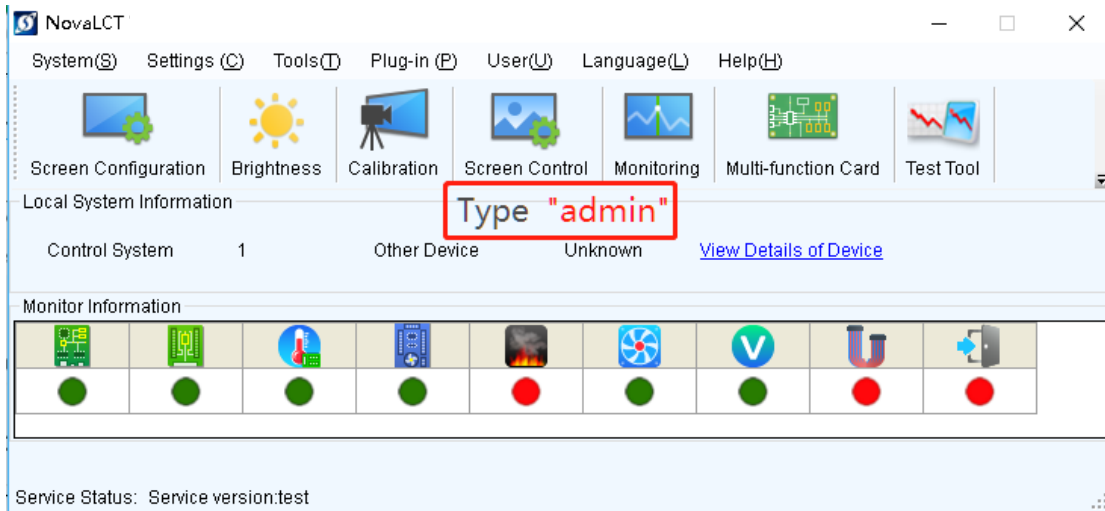


Figure 3

4. Choose right communication port, Refresh to finish firmware version check.

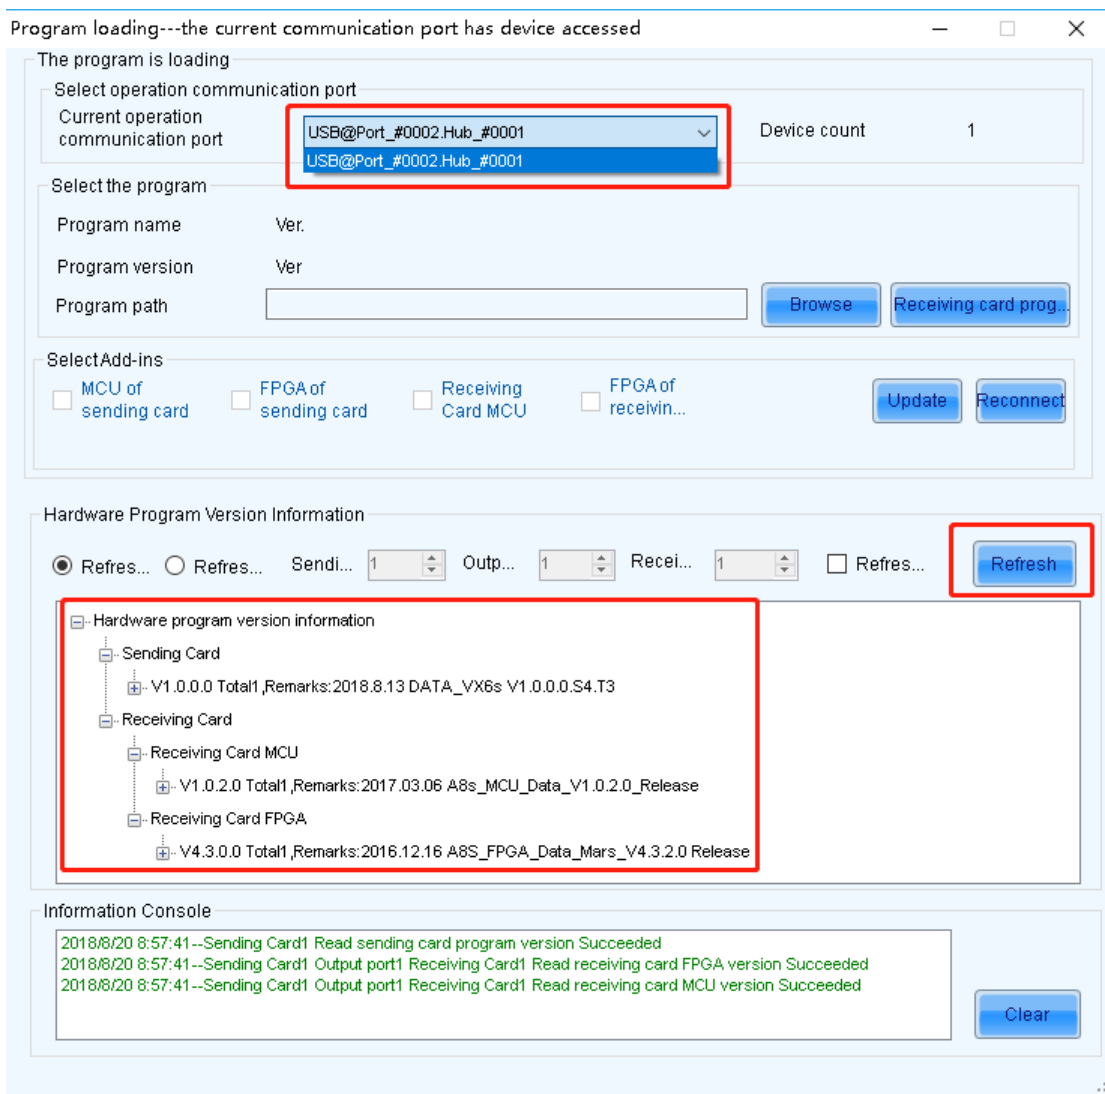


Figure 4

5. Click program path and choose right data.
6. Click update to finish update.

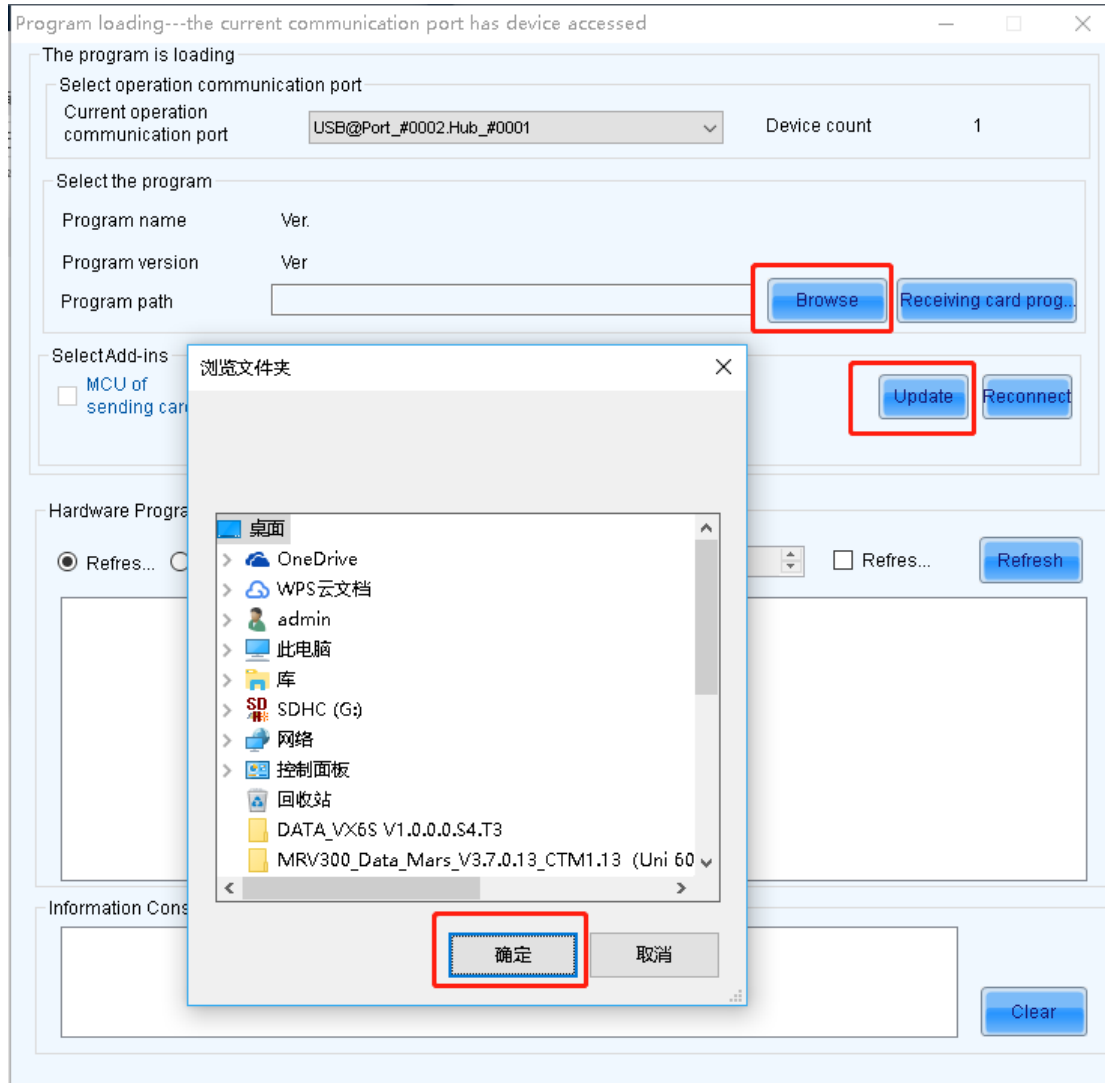


Figure 5

Note:

Contact the supplier before upgrading the program if the hardware is specially customized.